
Installation of Injecta pumps Ultima Swimming Pool controller

Plug the power leads of Hypo and acid pumps to the sockets number 3 and 4 of the controller (consequences are not important). This powers the pumps ON and ready to dose according to the controller signals (through no volt output)

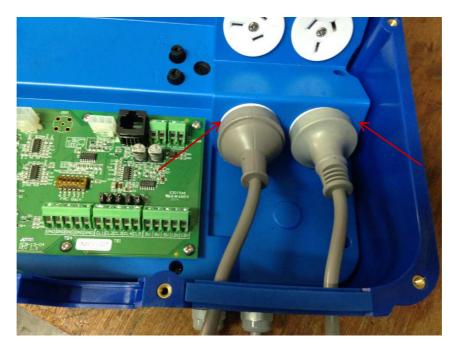

Wire the provided no volt output cables into the pumps as they are labelled for.



Set your pH and FAC settings.

You may reduce the pumps duties if they are oversized for your application.

Please contact Aquarius Technologies office at (07 3274 4750) for any assistance.