

Swimming Pool controllers - User Manual

Appendix 1. New functionalities of SF100 and SF200 FAC controllers

Table of Contents:


1. Start-up procedure	2
1.a. Adjusting the correction factor for your swimming pool	2
2. FAC Calibration	2
3. Set SANITIZE	3
4. Set FAC/ORP	3
5. Switch from Logo Page to Data Page	4
6. Set Points Sneak Peek	4
7. Timer for Outputs	5
7.a. Check output relays for 5 sec	5
7.b. Run Multiple Outputs by Timer	5
8. Set Conductivity/TDS conversion factor	6
9. Set Time	6
10. Clear Data Log	7
11. Activate Common Alarm Port	7

1. Start-up procedure:


- Ensure all pumps and probes are connected/plugged in correctly. Sockets are labelled for your convenience.
- If a relay is used, make sure relay is plugged in
- Switch the controller on by plugging into a power point. Turn the inlet and outlet valves on to allow flow through the manifold.

1.a. Adjusting the correction factor for your pool

In order to adjust the CF (Correction Factor) for your pool, it is important to firstly calibrate the FAC probe. (Please see point 2 below for FAC calibration procedure. The CF should be between 0.5 – 1.5 when Calibrating the FAC probe. IF not then follow the instructions below for adjustment. It is advisable to start with a free chlorine level of between 1-3 ppm to ensure a smooth transition.

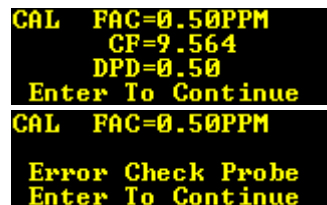

If CF is out of the accepted range, the system may or may not be able to calibrate. For efficient operation it is important to adjust the CF to between 0.5-1.5

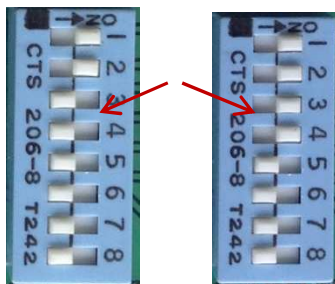


In order to adjust the system:

- Open the door of the controller panel.
- Locate the dip switches on FAC board.
- Turn the switches ON, from left to right until CF is in range between 0.5 – 1.5

2. FAC Calibration

It is important to keep the FAC probe calibrated. A DPD1 test can be used to calibrate the FAC probe.

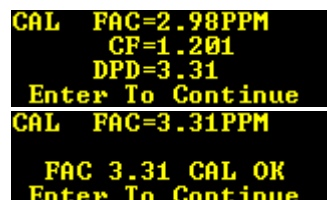

Press  and then  until **facCtrl ?**

Input the DPD1 result and press



No Calibration is required if controller FAC measurement is within 20% of your DPD1 test results.

3. Set Sanitize

```
SANITIZE CONTROL=FAC
RELAY=CELL
BACKUP=ENABLED
```

When on SANITIZE page press SET to change settings

```
SET SANITIZE CTR=FAC
RELAY=CELL
BACKUP=ENABLED
```

Use  followed by  or  to change the Control Method (CTR), Relay and Back up

The available options are:

CTR:

FAC: to control disinfection via direct measure of chlorine

ORP: to control disinfection via ORP measurement

Relay:

CELL: for salt chlorinators

HYPO: for dosing sodium hypochlorite

4-20mA (option): to control Salt Chlorinators /chlorine dosing via 4-20mA outputs

Set 0-100% or 100-0% according to your equipment.

BACKUP: Enable BACKUP if you have a hypo pump connected to back up your chlorinator

BKP on: The % of set point to turn the backup pump on

BKP off: The % of set point to turn the backup pump off

Warning: BKP OFF should be always greater than BKP ON + 3% for the system to dose correctly.

4. Set FAC / ORP

```
FAC          RL=OFF
FAC=3.72    SET=1.50
DUTY=100%   FLOW=ON
ALM=+/-01.5 LOCK=OFF
```

When on FAC/ORP page press SET to change settings (refer to Swimming Pool User Manual to see how)

```
SET FAC
FAC=3.72    SET=3.70
DUTY=100%   MODE=FLW
ALM=+/-01.5 LOCK=OFF
```

Use  followed by  or  to change set point, Duty, Mode, Alarm criteria and Lock out time.

Note:

Either FAC or ORP can be set

When FAC is set as sanitize control, ORP will be read only

When ORP is set as sanitize control, FAC will be read only

A warning will appear when FAC is set to more than 3.0 ppm

```
FAC          RL=OFF
FAC=3.72    SET=3.70
DUTY=100%   FLOW=ON
ALM=+/-01.5 LOCK=OFF
```

```
WARNING!
FAC Set > 3.00

Accept: Yes
```

5. Switch from Logo Page to Data Page

Calibration Mode
Choose Cal. Mode ?
Up/Down Select
Press Enter To Exit

Press  and then  until **System ?**



Calibration Mode
system ?
Up/Down Select
Enter To Confirm

Press  and then  until **Panel Selection**


System Control
Panel Selection
Up/Down To Change
Enter To Continue

Press 

Panel Selection Menu
Display Logo Pg
Up/Dn Chg Entr to C

Press  or  to Select

Panel Selection Menu
Display Data Pg
Up/Dn Chg Entr to C


Press  to Confirm and  to exit

6. Set Points Sneak Peek

TDS =798 FAC=2.98
mS/cm=1.45 ORP=601
TEMP =26.0 pH =7.10
ALARM=ON FLOW=ON

When on **Data Page** press  and hold it down

mS/cm=5.75 FAC=3.00
ORP=725
pH =7.40
SET-POINTS

Set points are displayed as long as  button is down


Release  and Press  to return to **Data Page**

7. Timer for Outputs

7a. Check Output Relays for 5 sec


```
TDS =798 FAC=2.98
mS/cm=1.45 ORP=601
TEMP =26.0 pH =7.10
ALARM=ON FLOW=ON
```

```
Test RL MAN 5 secs
RL1-pH OFF
ON: NONE
Press Read To Exit
```

When on Logo/Data Page press  and hold for 5 sec

Press  and then  to Change from MAN to RUN

Each Output will RUN automatically for 5 seconds

Press  to Exit and  to main menu

7b. Run Multiple Outputs by Timer

```
TDS =798 FAC=2.98
mS/cm=1.45 ORP=601
TEMP =26.0 pH =7.10
ALARM=ON FLOW=ON
```

```
Test RL MAN 5 secs
RL1-pH OFF
ON: NONE
Press Read To Exit
```

```
Test RL MAN 15 secs
RL4-ORP/FAC MAIN OFF
ON: NONE
```

```
Test RL MAN 15 secs
RL4-ORP/FAC MAIN ON
ON: 4 00:15
Press Read To Exit
```

```
Test RL MAN 2 mins
RL1-pH ON
ON: 1 4 6 01:57
Press Read To Exit
```



```
Test RL MAN 6 mins
RL2-ORP/FAC BKP ON
ON: 1 2 4 05:55
Press Read To Exit
```

When on Logo/Data Page press  and hold for 5 sec


Press  twice and then  or  to set the time

Press  then  or  to select time unit "mins/secs"

Press  then  or  to select Output

Press  then  or  to turn it On/Off

Repeat the above two steps to select more outputs

System automatically **Exits** to normal operations 10 minutes after the timer finishes. Press  if you want to **Exit** earlier.

8. Set Conductivity/ TDS Conversion Factor

```

Calibration Mode
Choose Cal. Mode ?
Up/Down Select
Press Enter To Exit
  
```

Press  and then  until **System ?**

```

Calibration Mode
system ?
Up/Down Select
Enter To Confirm
  
```

Press  then  until **TDS Conv Factor**




```

System Control
TDS Conv Factor
Up/Down To Change
Enter To Continue
  
```

Press 

```

TDS Conversion
1 uS/cm=0.65 ppm
Up/Down To Change
Enter To Continue
  
```

Press  or  to change and  to Save

9. Set time

Procedure to set time when there is no modem installed on the controller:

```

Calibration Mode
Choose Cal. Mode ?
Up/Down Select
Press Enter To Exit
  
```

Press  and then  until **System ?**

```

Calibration Mode
system ?
Up/Down Select
Enter To Confirm
  
```

Press  and then  until **Set Time**




```

System Control
Set Time
Up/Down To Change
Enter To Continue
  
```

Press 

```

Controller Time:
1/07/12 16:54:18
Press Enter to Save
  
```

Press  or  to change and  to Save

NOTE!

Press  to exit without saving!

When a modem is installed the following message appears informing that time zone should be set from AquaReporter website:

```

Controller Time:
Set timezone
on website
Enter To Continue
  
```

Use AquaReporter website to set time zone

10. Clear Data Log

The following procedure is used to clear datalog:

Calibration Mode
Choose Cal. Mode ?
Up/Down Select
Press Enter To Exit

Press  and then  until **System ?**

Calibration Mode
system ?
Up/Down Select
Enter To Confirm

Press  and then  until **Clear Datalog**

System Control
Clear Datalog
Up/Down To Change
Enter To Continue

Press 

Clear Data log?
No?

Press  or  to change

Clear Data log?
Yes?

Press  to Continue

11. Activate Common Alarm Port

The Common Alarm port of “WEB READY” controllers is programmed to restart modems when they stop communicating with Aquarius Clouds Server.

As long as there is no modem installed, this port can be activated to send alarms to an external alarm system (e.g., BMS, Siren, flashing light). The relevant steps are described here:

Calibration Mode
Choose Cal. Mode ?
Up/Down Select
Press Enter To Exit

Press  and then  until **System ?**



Calibration Mode
system ?
Up/Down Select
Enter To Confirm

Press  and then  until **Relay Select**

System Control
Relay Select
Up/Down To Change
Enter To Continue

Press 

ALARM O/P Controls:
Modem
Up/Down To Change
Enter To Continue

Press  or  to change to **Common Alarm**

ALARM O/P Controls:
Common Alarm
Up/Down To Change
Enter To Continue

Press  to Continue

NOTE! This port should not be connected to an external alarm system when a modem is connected.